 


Switches, 10AX AC250V

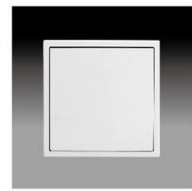

 
701011
1-Gang 1-way switch

701012
1-Gang 2-way switch

701123
1-Gang double-pole switch


701124
Double-pole 2-way switch

701126
1-Gang intermediate switch

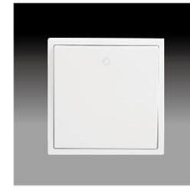


701013
1-Gang 1-way switch with LED indicator

 701014
1-Gang 2-way switch with LED indicator

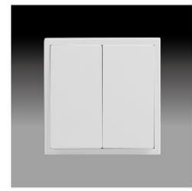


701021
2-Gang 1-way switch

 701022
2-Gang 2-way switch

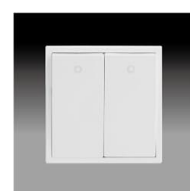

701023
2-Gang 1-way switch with LED indicator

 701024
2-Gang 2-way switch with LED indicator

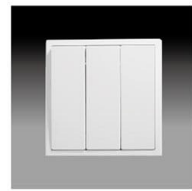

701031
3-Gang 1-way switch

 
701032
3-Gang 2-way switch



701033
3-Gang 1-way switch with LED indicator

701034
3-Gang 2-way switch with LED indicator


Switches, 20AX AC250V

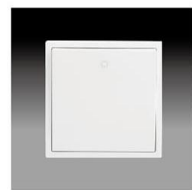


702023
1-Gang 1-way double-pole switch with blue LED indicator

702024
1-Gang 2-way double-pole switch with blue LED indicator

 Switches, 32AX AC250V

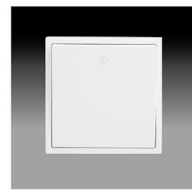

 703223
1-Gang 1-way double-pole switch with red LED indicator

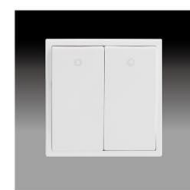

703224
1-Gang 2-way double-pole switch with red LED indicator

SERIES
simon i7
simon.sale



simon 39+
simon 50
simon 51A
simon 52
simon 60
simon V5
simon i7
Flush mounting boxes

Telephone, TV and data sockets



705214
Telephone outlet for RJ11 connector

 


705218
Data outlet for RJ45 connector Cat.5e

705618
Data outlet for RJ45 connector Cat.6



705224
Twin telephone outlet for RJ11 connector

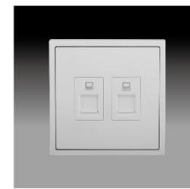

705228
Twin data outlet for RJ45 connector Cat.5e

705628
Twin data outlet for RJ45 connector Cat.6



705119
Twin TV outlet



705229
Telephone for RJ11 connector and data for RJ45 connector Cat.5e outlet

705629
Telephone for RJ11 connector and data for RJ45 connector Cat.6 outlet



705111
TV outlet



705302
TV and data for RJ45 connector Cat.5e outlet

705602
TV and data for RJ45 connector Cat.6 outlet



705114
Shielded TV outlet F type connector

 


705301
TV and telephone for RJ11 connector outlet



705119S
TV and TV F type connector outlet


Push-buttons, 10AX AC250V

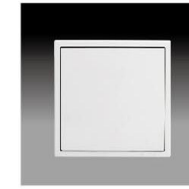

701011F
1-Gang push-button switch



 701031F
3-Gang push-button switch

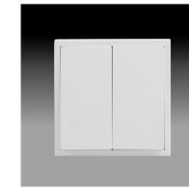

701021F
2-Gang push-button switch



706301
Doorbell switch



70E611
Doorbell switch with "Do Not Disturb" indicator

 


70E613
Doorbell switch with "Wait A Minute", "Do Not Disturb" and "Make Up Room" indicator



70E612
Doorbell switch with "Do Not Disturb" and "Make Up Room" indicator

Socket-outlets

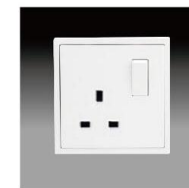

701382
13A British socket with switch

 


701072
10A Twin 2-pin socket for flat and round pins

SERIE simon 39+
SERIE simon 50
SERIE simon 51A
SERIE simon 52
SERIE simon 60
SERIE simon V5
SERIE simon i7
Flush mounting boxes

39+ simon
50 simon
51A simon
52 simon
60 simon
V5 simon
i7 simon
Flush mounting boxes

Others

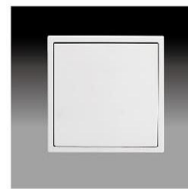

701000
Blank plate



70E601
20A Card switch



705901
Emergency switch



700495
VGA-3.5 outlet



700493
AV-S outlet



700494
USB-HDMI outlet

Frames



700610
1-Gang white frame



700620
2-Gang white frame

Lighting control and regulation



70E101
500W Dimmer switch for incandescent load



70E401
160W Voice and light switch



70E301
160W Presence detector switch



70E501
160W Touch time delay switch

Sound system



70E621
4-Channel volume control switch (3 wiring)



70E623
Volume control switch



70E622
4-Channel volume control switch (7 wiring)



705402
Twin speaker outlet



 
705401
Speaker outlet

Fan control and regulation




70E201
200W Fan speed control switch


Frames

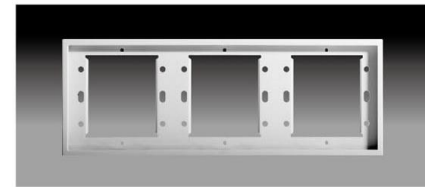

700630
3-Gang white frame

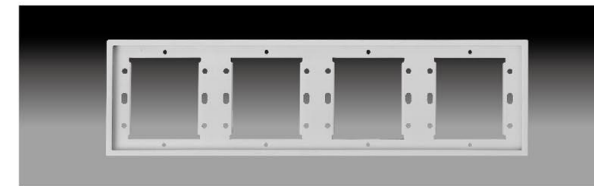 

700640
4-Gang white frame

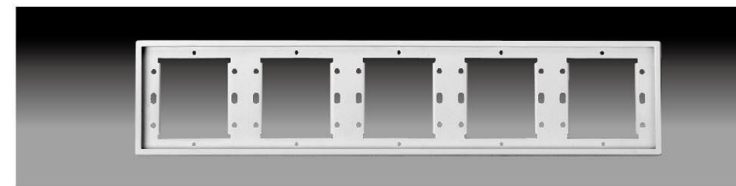 

700650
5-Gang white frame

Customized rockers and frames available in different colours:



Reference colours