

**simon**  
enjoy  
electricity ●


**simon.sale**

[www.simon.es](http://www.simon.es)

<http://international.simon.com.cn>

[export@simon.com.cn](mailto:export@simon.com.cn)


KGZH 02E Mar 2015 printing

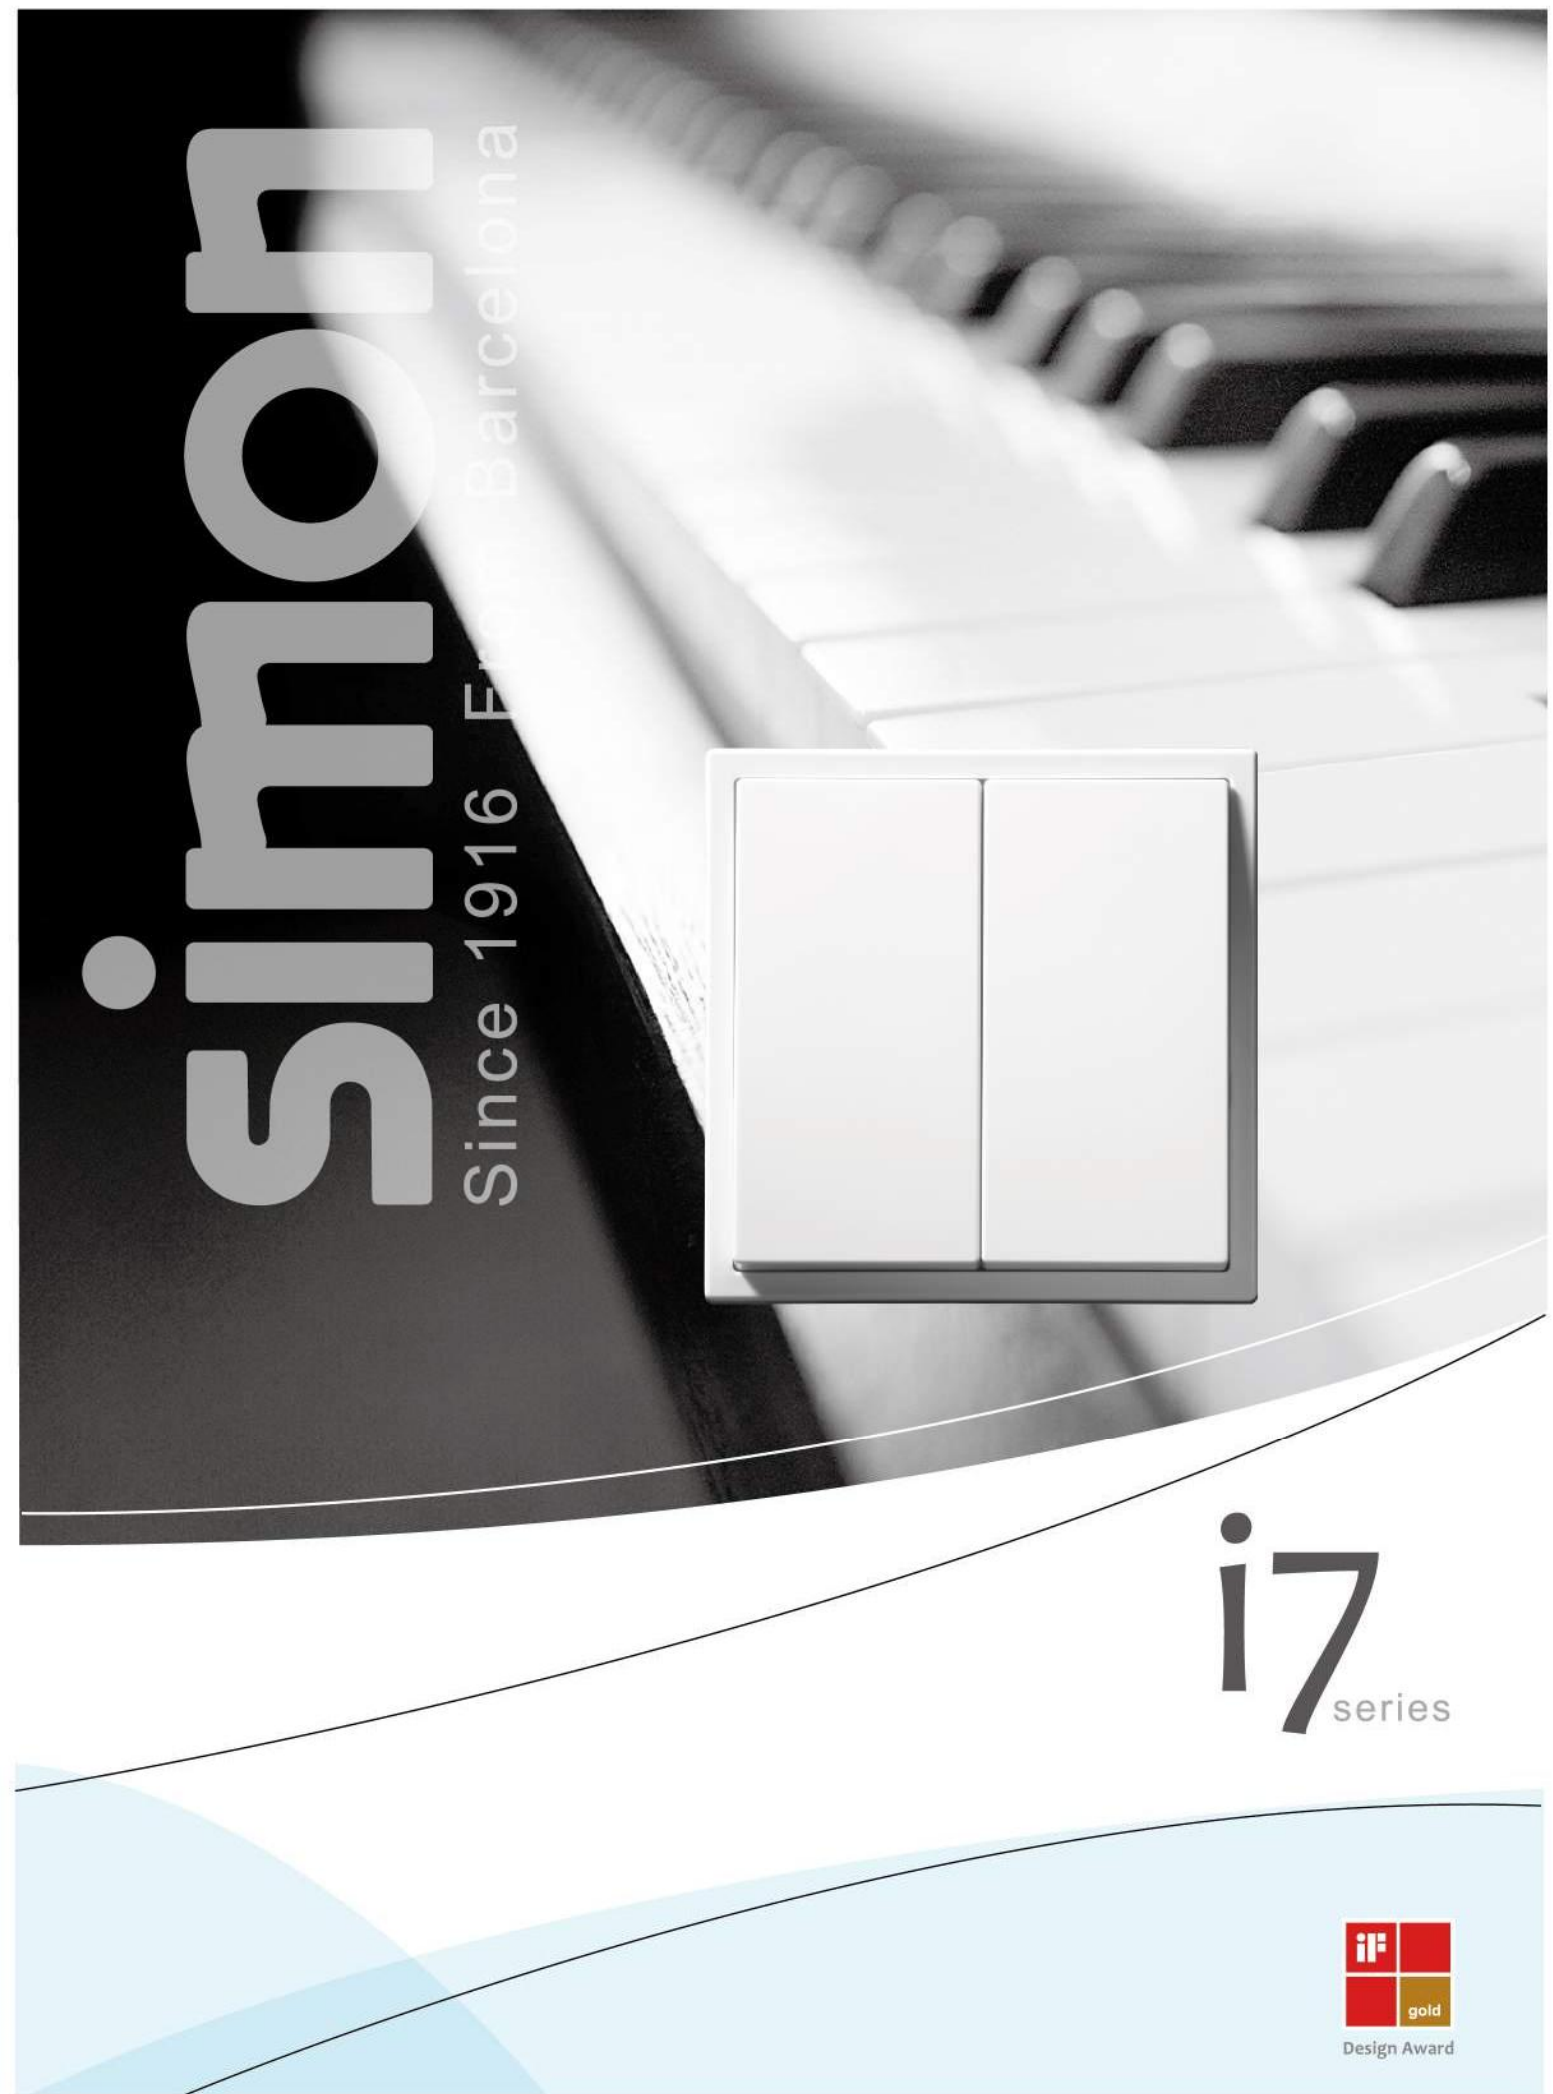

The advertisement features a close-up, black and white photograph of a Simon i7 series light switch. The switch is a rectangular, white, three-gang rocker switch mounted on a white wall. The background is a blurred view of a piano keyboard, with the keys receding into the distance. The overall aesthetic is clean and modern.

**simon**  
Since 1916 From Barcelona

**i7**  
series

  
Design Award

simon  
Since 1916


i7  
series



Simon i7 Series

Elegant Simple  
Unique Sophisticate

## Simple and elegant as a piano

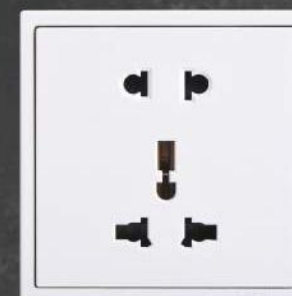 

Its extensive face with vertical and proportionate lines gives a comfortable and desirable form. Adopting the latest technology, the switch and the socket have the same size. The visual effect is more aesthetically pleasant.



Multi-gang  
design

**i7** series of switches and sockets have multi-gang frames (up to 5 gangs) with multiple combinations.


A special SIMON mounting box is needed (60710-50) in order to emphasize the visual expression of the design.





## Safe and soft push

 The feeling, when pushing, is comfortable and easy as i7 adopts the J Shape Toggle system.

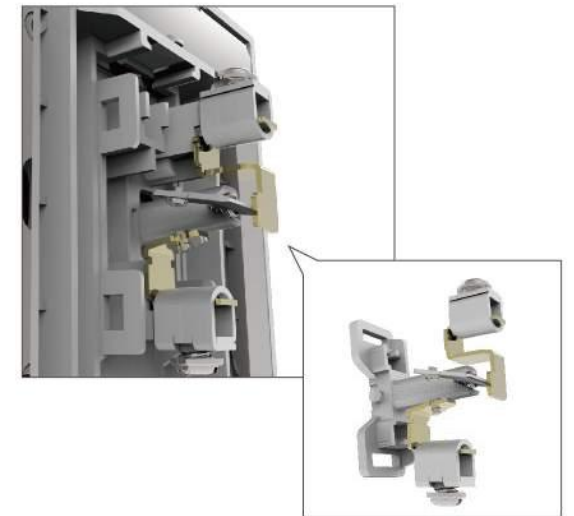


Due to the J shape toggle system, the angular movement is very precise (only 4.5 degrees) making the pushing feeling faster and safer.




## Flexible wire, easy to connect

 The saddle shape of the terminal has a wider wire.

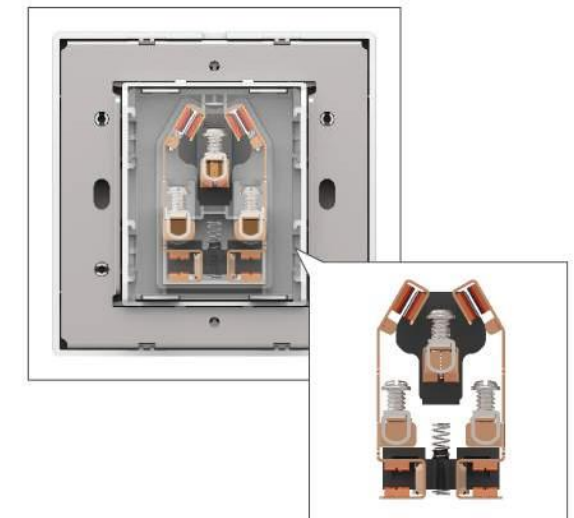

 The shade of the terminal avoid the wire to be damaged. As the wire is wider than the average ( $0.55\text{mm}^2 \leq f \leq 6\text{mm}^2$ ), the house electricity system is easier to connect.

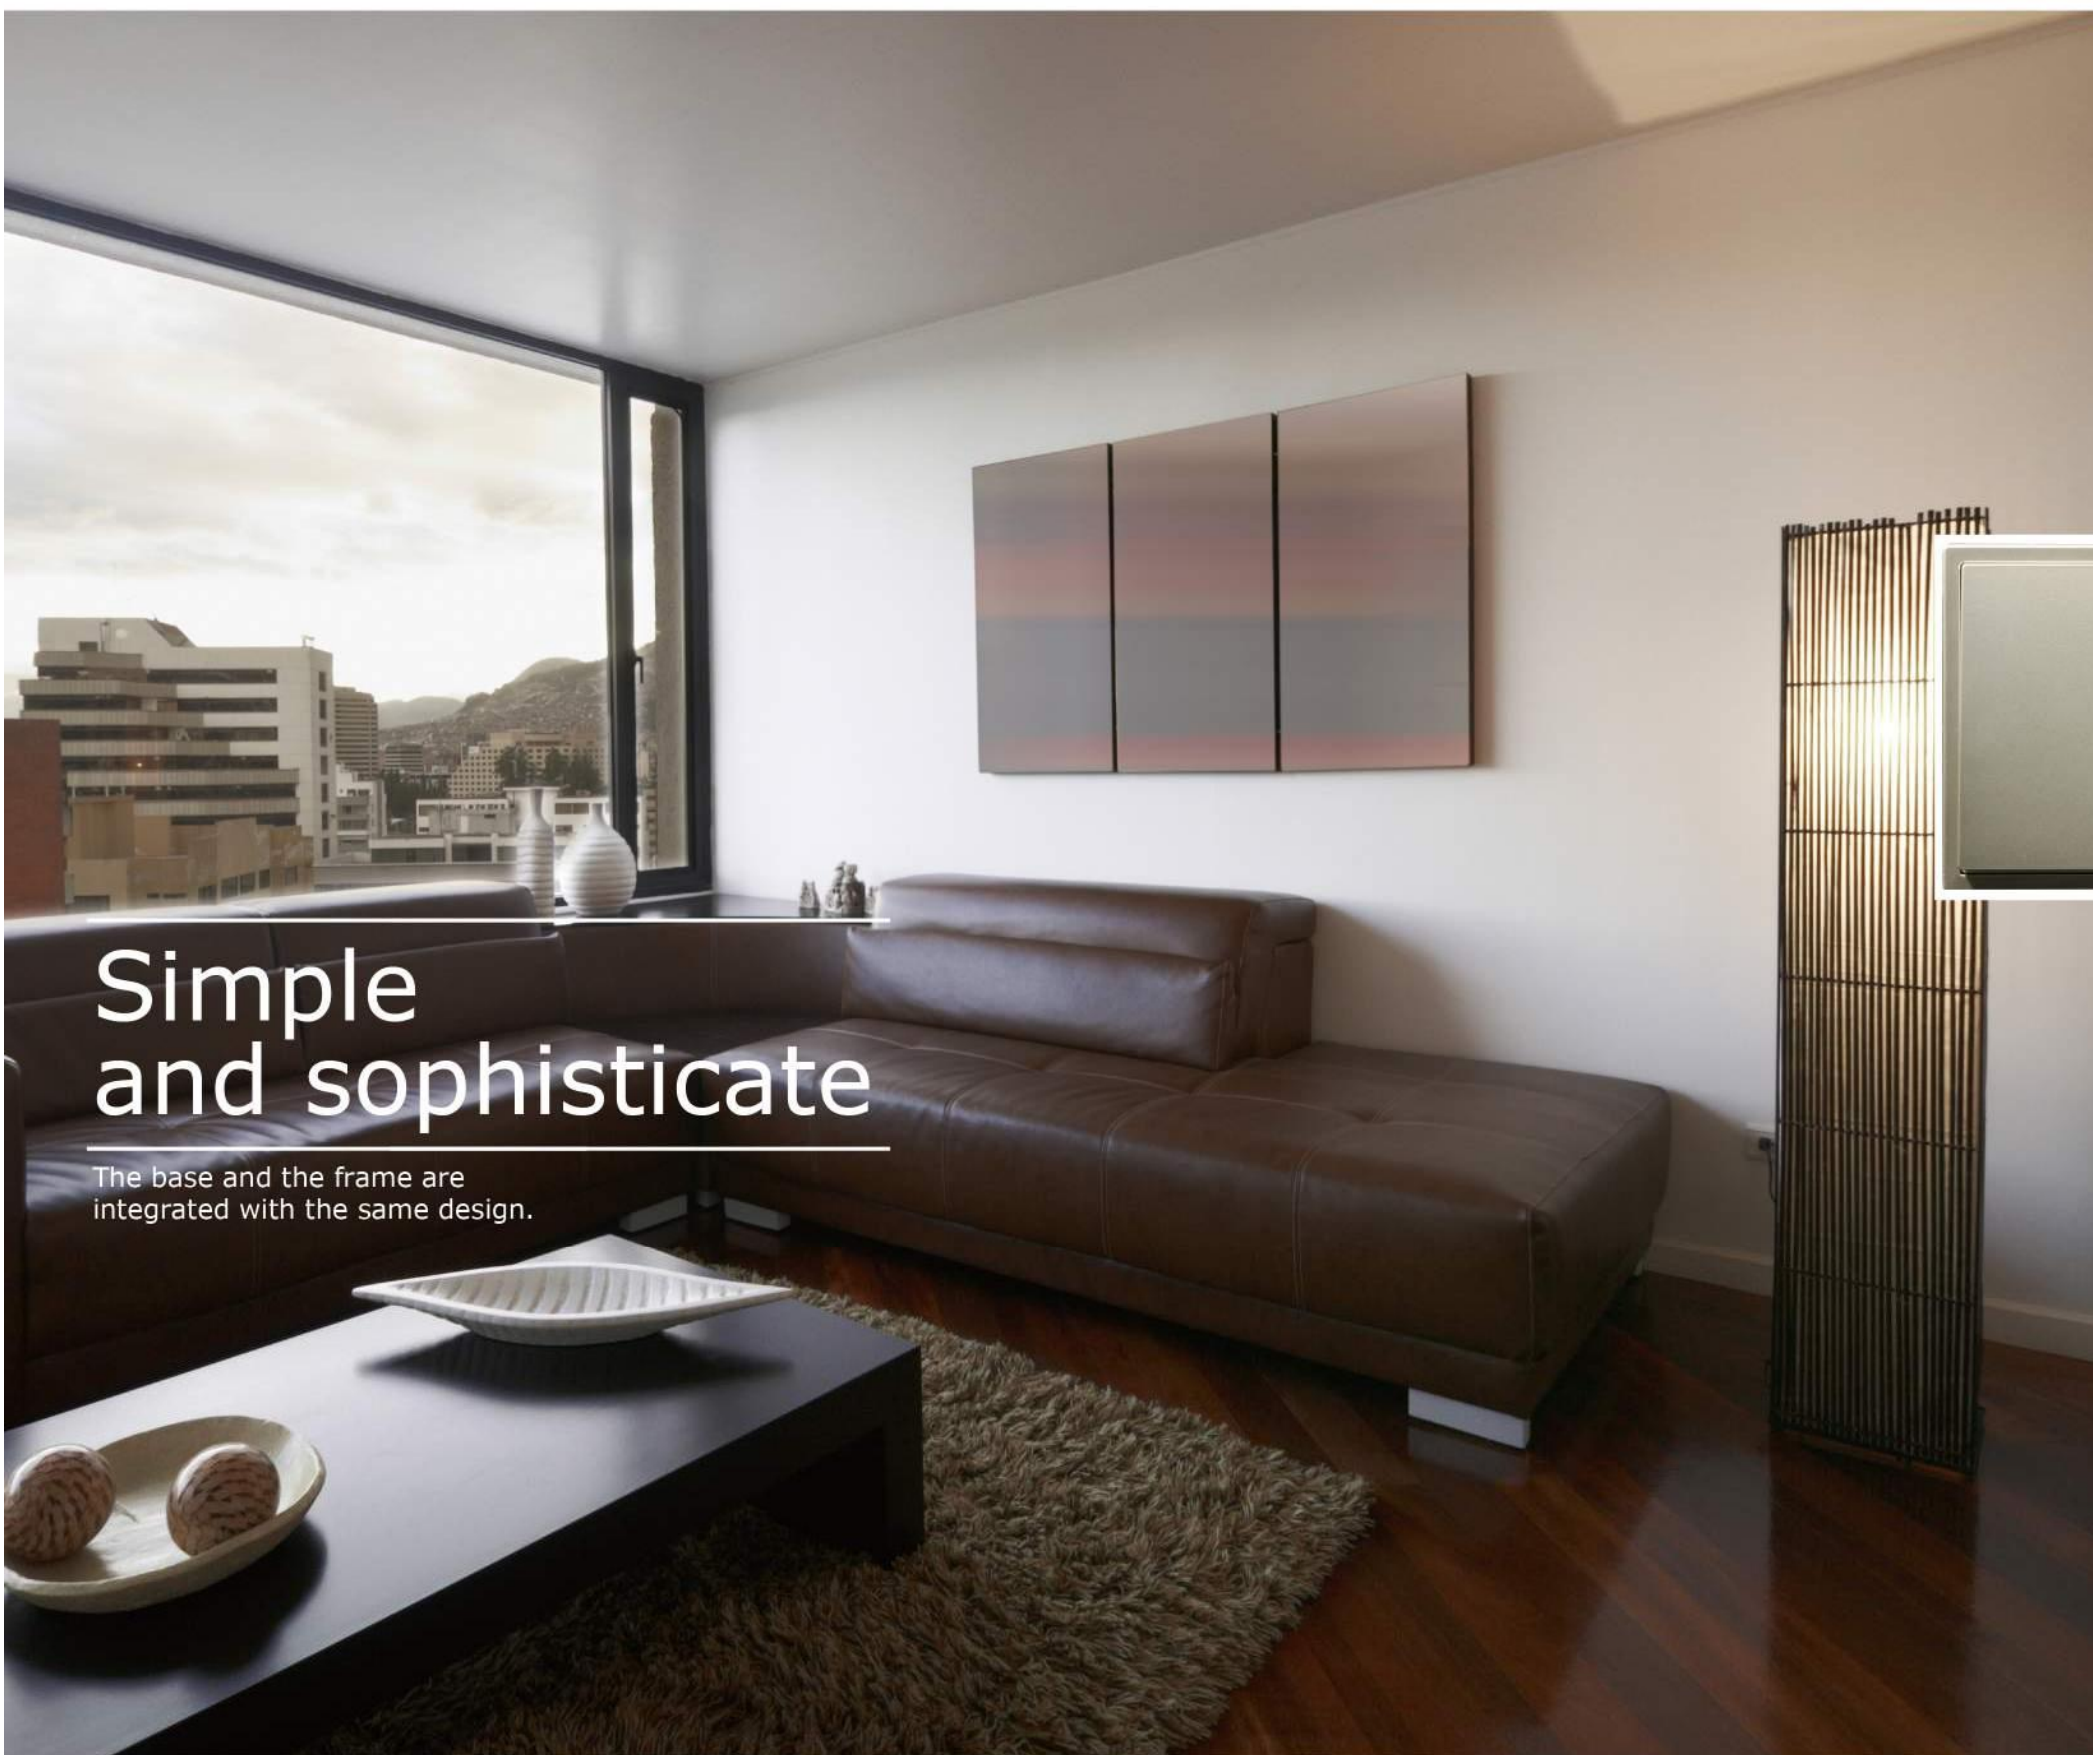

# Simple and sophisticate

The base and the frame are  
integrated with the same design.



## Ultra extraordinary

The base, made of PC-steel material, has high  
strength and no deformation.

## Children safety block

Extremely Simple



1) At home, the children often play and crawl on the ground putting their life in different kind of risks.



2) Driven by curiosity, children always explore new things.



3) The outlets can be easily reached, therefore there's a potential threat to their life, if there is no safety lock in the sockets.



4) SIMON's sockets have the children safety lock that protects in two ways. In one side, when inserting something in one socket hole, the device will not work. In the other side, when external things are inserted the socket will also avoid connection, protecting the children and the families.



Extraordinary





The matt and techno color effect can adapt to any interior style and gives a sophisticate feeling. Three color options: white, champagne and grey.

## Exquisite colors



White



Champagne



Grey

 


## The new electronic technique enable energy saving

i7 adopts a new electronic technique, to achieve two-wire system of full load (which can be suitable for incandescent, fluorescent, halogen and LED with only two wires), that enables saving energy and reducing the use of carbon.



Touch time delay

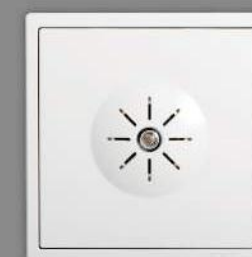

Presence detector



Voice and light



# i7 series

HDMI+USB, VGA-3.5 outlet, AV-S outlet.

 
 
i7 series TV, data and telecommunications sockets enable to meet the multimedia needs for both home or commercial usage.

With i7, it is possible to enjoy entertainment and work efficiently.





## Switch installation procedure:

1. Hold the frame and the mechanism (Fig.1)
2. Separate the rocker from the mechanism (Fig.2,3)
3. Connect the plate with frame (Fig.4)
4. Plug the wires into terminals and tight the screws (Fig.5,6)
5. Install the switch into the mounting box (Fig.7,8)
6. Place the rocker into the mechanism (Fig.9,10)
7. Finish the installation (Fig.10)

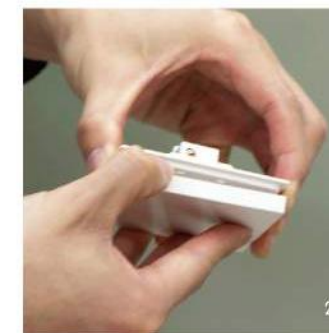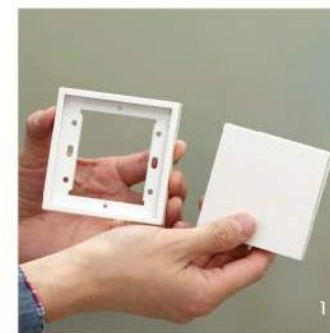

## Socket installation procedure:

  1. Hold the frame and the mechanism (Fig.1)
2. Take out the cover from the mechanism (Fig.2,3)
3. Place the base plate together with the frame (Fig.4)
4. Plug the wires into the terminal and tight the screws (Fig.5,6)
5. Install the socket into the mounting box (Fig.7,8)
6. Place the cover into the mechanism (Fig.9,10)
7. Finish the installation (Fig.10)

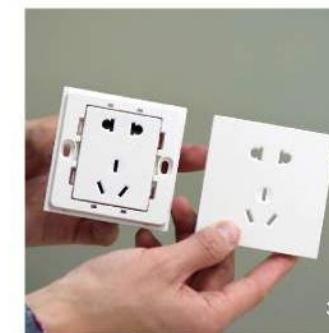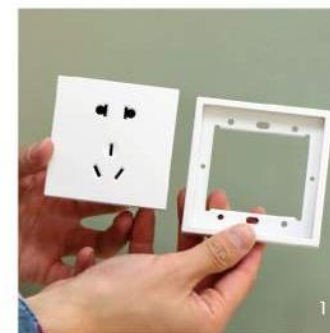


# i7 series


Elegant Simple  
Unique Sophisticate


 
## Multigang Frames

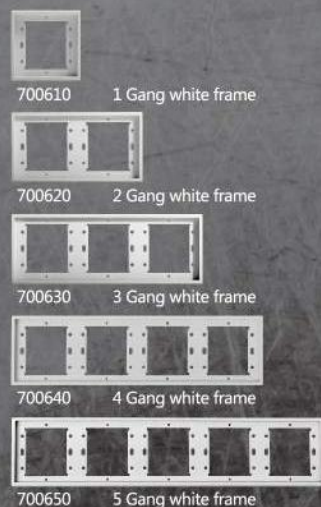

 Customized rockers and frames available in different colours:

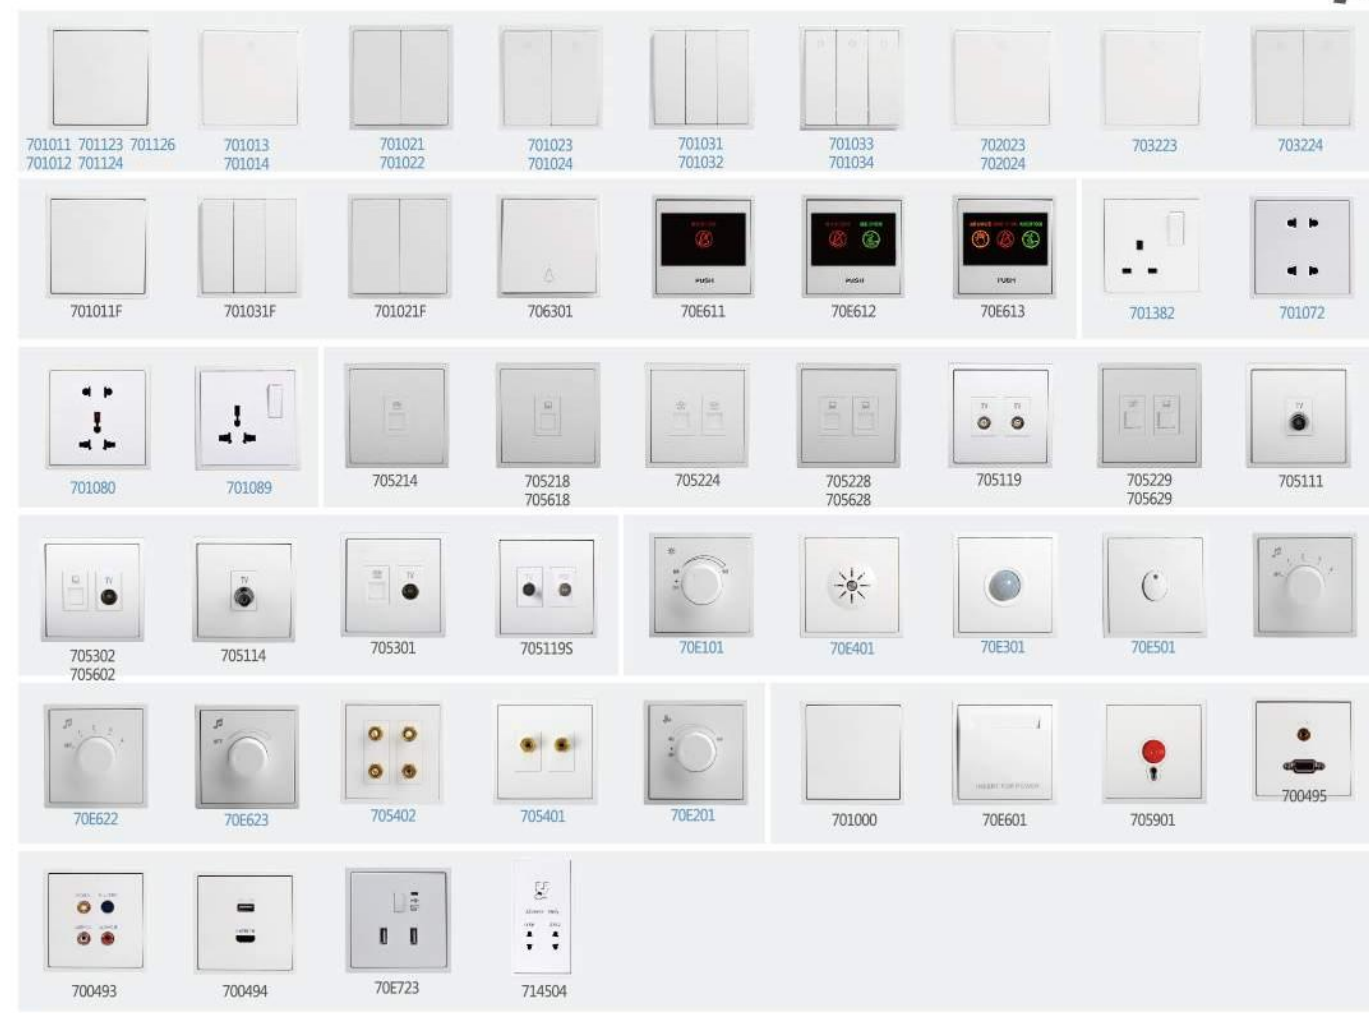

### Switches

- 701011 10AX 250V 1 Gang 1 way switch
- 701012 10AX 250V 1 Gang 2 way switch
- 701123 10AX 250V 1 Gang double-pole switch
- 701124 10AX 250V Double-pole 2 way switch
- 701126 10AX 250V 1 Gang intermediate switch
- 701013 10AX 250V 1 Gang 1 way switch with LED indicator
- 701014 10AX 250V 1 Gang 2 way switch with LED indicator
- 701021 10AX 250V 2 Gang 1 way switch
- 701022 10AX 250V 2 Gang 2 way switch
- 701023 10AX 250V 2 Gang 1 way switch with LED indicator
- 701024 10AX 250V 2 Gang 2 way switch with LED indicator
- 701031 10AX 250V 3 Gang 1 way switch
- 701032 10AX 250V 3 Gang 2 way switch
- 701033 10AX 250V 3 Gang 1 way switch with LED indicator
- 701034 10AX 250V 3 Gang 2 way switch with LED indicator
- 702023 20AX 250V 1 Gang 1 way double-pole switch with blue LED indicator
- 702024 20AX 250V 1 Gang 2 way double-pole switch with blue LED indicator
- 703223 32AX 250V 1 Gang 1 way double-pole switch with red LED indicator
- 703224 32AX 250V 1 Gang 2 way double-pole switch with red LED indicator

### Push buttons

- 701011F 10AX 250V 1 Gang push-button switch
- 701021F 10AX 250V 2 Gang push-button switch
- 701031F 10AX 250V 3 Gang push-button switch
- 706301 10AX 250V Doorbell switch
- 70E611 10AX 250V Doorbell switch with "Do not disturb"
- 70E612 10AX 250V Doorbell switch with "Do not disturb" and "Make Up Room" indicator
- 70E613 10AX 250V Doorbell switch with "Wait A Minute", "Do Not Disturb" and "Make Up Room" indicator

### Sockets outlets

- 701382 13A British socket with switch
- 701072 10A Twin 2-pin socket for flat and round pins
- 701080 Multiple socket
- 701089 Multiple socket with switch

### Telephone, TV and data sockets

- 705214 Telephone outlet for RJ11 connector
- 705218 Data outlet for RJ45 connector Cat.5e
- 705618 Data outlet for RJ45 connector Cat.6
- 705224 Twin telephone outlet for RJ11 connector
- 705228 Twin data outlet for RJ45 connector Cat.5e
- 705628 Twin data outlet for RJ45 connector Cat.6
- 705119 Twin TV outlet
- 705229 Telephone for RJ11 connector and data for RJ45 connector Cat.5e outlet
- 705629 Telephone for RJ11 connector and data for RJ45 connector Cat.6 outlet
- 705111 TV outlet
- 705302 TV and data for RJ45 connector Cat.5e outlet
- 705602 TV and data for RJ45 connector Cat.6 outlet
- 705114 Shielded TV outlet F type connector
- 705301 TV and telephone for RJ11 connector outlet
- 7051195 TV and TV F type connector outlet

### Control and regulation

- 70E101 500W Dimmer switch for incandescent load
- 70E401 160W Voice and light switch
- 70E301 160W Presence detector switch
- 70E501 160W Touch time delay switch
- 70E621 4-Channel volume control switch (3 wiring)
- 70E622 4-Channel volume control switch (7 wiring)
- 70E623 Volume control switch
- 705402 Twin speaker outlet
- 705401 Speaker outlet
- 70E201 200W Fan speed control switch

### Others

- 701000 Blank Plate
- 70E601 20A Card Switch
- 705901 Emergency Switch
- 700495 VGA-3.5 outlet
- 700493 AV-S outlet
- 700494 USB-HDMI outlet
- 70E723 Double USB charger
- 714504 Shaver

**simon**  
[simon.sale](https://simon.sale)